
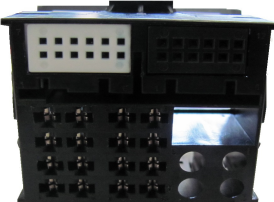





**INSTALLATION ESTIMATED IN 1 HOUR**


	VOLKSWAGEN	PLUG AND PLAY CBL059VWDB11	PROTOCOL CANBUS 2 WIRES
---	------------	-------------------------------	----------------------------

Vehicle	Year	OEM Radio
Amarok	2013->	All models
Beetle	2012->	All models
Eos	2011->	All models
Golf V	2004-2007	All models
Golf V Plus	2004-> 2010	All models
Golf VI	2008->	All models
Passat	2004-2009	All models
Passat	2010-> 2014	All models
Passat CC	2008-> 2013	All models
Polo	2009-> 2013	All models
Scirocco	2011-> 2013	All models
Sharan	2010-> 2014	All models
Tiguan	2007-2010	All models
Tiguan	2011-> 2014	All models
Touran	2004-2009	All models
Touran	2010-> 2014	All models


Connector position: Radio location	ANTENNA ADAPTER
<p>Behind the radio there is the OEM radio connector.</p> <div style="display: flex; justify-content: space-around;">   </div>	<p>Code: CBL054ANDB21</p> 

**ANTENNAS CONNECTION**

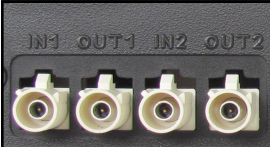

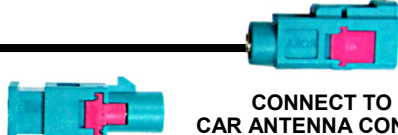


CONNECT TO THE  
RADIO ANTENNA PLUG



CONNECT TO THE  
CAR ANTENNA CONNECTOR






DAB ANTENNA  
SMB CONNECTION



**NOTES**

PLEASE TUNE THE FM RADIO ON THE DEFAULT STATION AND STORE THE FREQUENCY 87.7 MHZ IN ONE OF FREE CHANNELS (I.E. POSITION 1). PLEASE POWER MEDIADAB HD: THE MODULE WILL START AND IT WILL ENABLE THE SCAN OPERATION, FOR WHICH IT NEEDS A FEW MINUTES. PLEASE MAKE SURE THAT THE CAR IS IN AN OPEN AREA AND THE DAB ANTENNA IS CONNECTED PROPERLY. ONCE THE SCANNER IS COMPLETE, IT WILL START TO PLAY THE FIRST DAB STATION AVAILABLE.

**INSTALLATION ESTIMATED IN 1 HOUR AND A HALF**

	<p><b>VOLKSWAGEN</b></p>	<p><b>PLUG AND PLAY CBL059VWDB11</b></p>	<p><b>PROTOCOL CANBUS 2 WIRES</b></p>
<p><b>IN CASE OF OEM RADIO WITH DOUBLE ANTENNAS</b></p>			
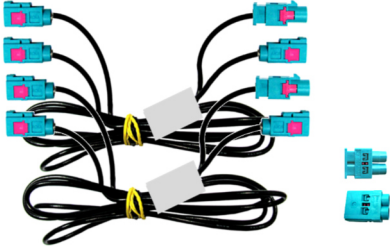
<p><b>Connector position: Radio location</b></p>	<p><b>ANTENNA ADAPTER</b></p>
<p>Behind the radio there is the OEM radio connector.</p> 	<p>Code: <b>KIT054ANDB21</b></p> 

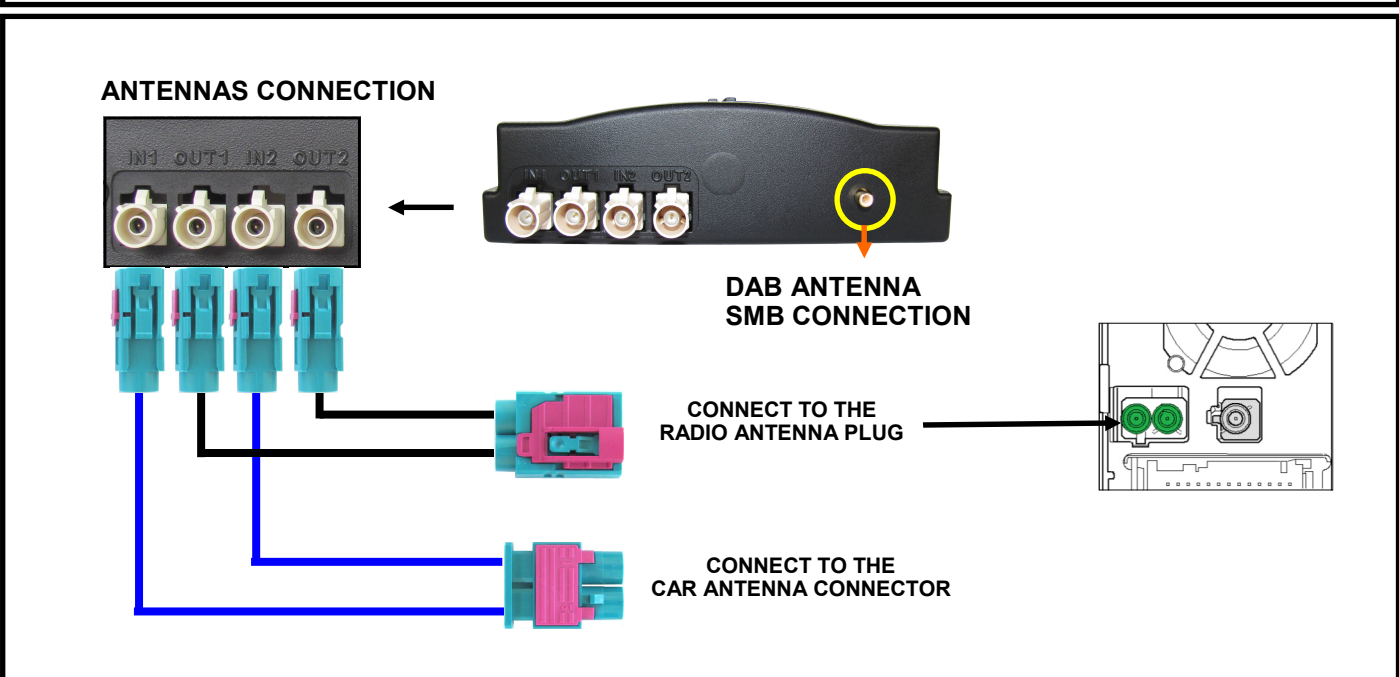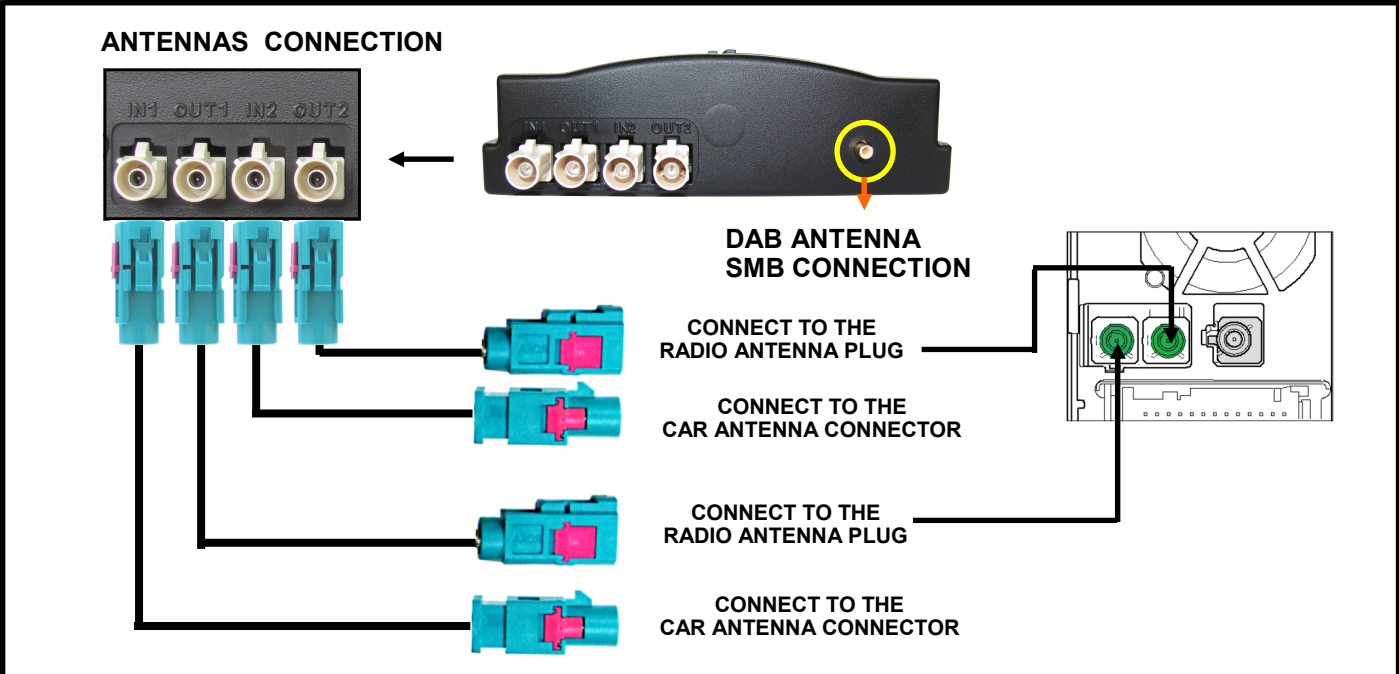



VOLKSWAGEN

PLUG AND PLAY  
CBL059VWDB11

PROTOCOL  
CANBUS 2 WIRES

QUICK MENU

SWITCH ON  
VOLUME  
SEQUENCE



VOL+



VOL-



VOL+



VOL-

SWITCH OFF  
VOLUME  
SEQUENCE



VOL+



VOL-



VOL+



VOL-

OR TROUGH THE MENU

ENTER MENU  
SOURCE  
SEQUENCE



LONG PRESS

MENU  
NAVIGATION  
SEEKS

PREVIOUS



NEXT

CONFIRM A MENU  
SELECTION  
PRESS  
MODE

SHORT PRESS



CHANGE  
CHANNEL  
THROUGH SEEK

PREVIOUS



NEXT

CHANGE  
FAVOURITE  
CHANNEL  
THROUGH SEEK

LONG  
PRESS  
PREVIOUS



LONG  
PRESS  
NEXT

ADD FAVOURITE  
CHANNEL  
VOLUME  
SEQUENCE



VOL-



VOL+

SCAN

PRESS  
OK 3 TIMES

